


| | | | |
|-----------------|----------------------|--------------|----------------------|
| Regn No | <input type="text"/> | Dealer : | <input type="text"/> |
| VIN | <input type="text"/> | Name & Sign | |
| Engine No | <input type="text"/> | Auto Terrace | <input type="text"/> |
| Mileage | <input type="text"/> | Workshop | <input type="text"/> |
| 1st Sale Date | <input type="text"/> | RF Incharge | <input type="text"/> |
| Inspection Date | <input type="text"/> | Dealer Stamp | <input type="text"/> |

| S/n | Discription | Verified | Remarks |
|---|---|----------|---------|
|  | 1 Vehicle VIN plates match, engine compartment, | | |
| | 2 VIN/ENGINE No | | |
| | 3 VIN Status Inquiry check and perform applicable repairs | | |


Washing Bay

| | | | |
|--|-----------------------------|--|--|
| | 4 Water leaks (Shower Test) | | |
|--|-----------------------------|--|--|

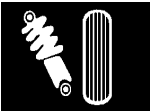


CAR ON LIFT BAY


Exterior

| S/n | Discription | Verified | Remarks |
|--|--|----------|---------|
|  | 5 Antenna must—replace if bent or sticking (if applicable) | | |
| | 6 Under hood—clean engine compartment | | |
| | 7 Front bumper—facia, guards, finish | | |
| | 8 Grille—headlights, other lights, trim, emblems | | |
| | 9 Hood—emblems & finish | | |
| | 10 LF fender—finish, trim | | |
| | 11 LF door—finish, trim | | |
| | 12 LR door—finish, trim | | |
| | 13 LR fender—finish, trim | | |
| | 14 Truck lid—finish, trim | | |
| | 15 Rear bumper—facia, guards, trim | | |
| | 16 RR fender—finish, trim | | |
| | 17 RR door—finish, trim | | |
| | 18 RF door—finish, trim | | |
| 19 RF fender—finish, trim | | | |
| 20 Roof—finish, trim | | | |
| 21 Windshield/glass—cracks, chips, scratches, pitting | | | |
| 22 Luggage compartment—mat/trim/carpet condition | | | |


Suspension

| S/n | Discription | Verified | Remarks |
|---|--|----------|---------|
|  | 23 Parking brake operation | | |
| | 24 Clutch pedal / Brake pedal free play and travel | | |
| | 25 Tires—OEM size, speed and load rating | | |
| | 26 Tires—matching brand & type | | |
| | 27 Tires— no road hazard damage/proper tire pressure | | |
| | 28 Tires—check for uneven wear or sidewall cracking | | |
| | 29 Wheels/rims—check for damage | | |
| | 30 Tires – Air-filler valve condition (Leak) | | |
| | 31 Wheel lug nuts—all present and properly torqued | | |
| | 32 Spare tire—condition/pressure | | |


Interior

| | | | | |
|---|--|--|--|--|
|  | 33 | Seat belts—condition, proper latching and retraction operation | | |
| | 34 | Seat upholstery/leather condition—front & rear | | |
| | 35 | Driver Seat Lumbar support (If equipped) | | |
| | 36 | Headrest movement | | |
| | 37 | Glove box/glove box light operation | | |
| | 38 | Luggage compartment—jack & tool present | | |
| | 39 | Trunk lid release/trunk lid light operation | | |
| | 40 | Fuel door release | | |
| | 41 | Hood release operation | | |
| | 42 | Carpet & mats—condition | | |
| | 43 | Dash & instrument panels | | |
| | 44 | Console/center armrest/beverage holders | | |
| | 45 | Front doors—controls, trim condition | | |
| 46 | Rear doors/quarter trim—controls, trim condition | | | |


Electrical

| | | | | |
|---|----|--|--|--|
|  | 47 | Horn operation | | |
| | 48 | Heater/defroster operation | | |
| | 49 | Battery—condition, fluid level, load test | | |
| | 50 | Starter operation | | |
| | 51 | Distributor—cap & rotor condition, shaft looseness (If Equipped) | | |
| | 52 | Clean Spark plugs & Adjust the cap | | |
| | 53 | Fuel system operation—Pump Noise/Connections/leakage | | |
| | 54 | Sunroof operation check (If applicable) | | |
| | 55 | Headlights—high/low operation and headlight aim, cracks, chips, scratches, pitting | | |
| | 56 | Brake lights | | |
| | 57 | Turn signal lights—operation, cracks, chips, scratches | | |
| | 58 | Parking lamps | | |
| | 59 | Fog lamps (if applicable) | | |
| | 60 | License plate light | | |
| | 61 | Taillights—operation, cracks, chips, scratches, damage | | |
| | 62 | Reverse lights | | |
| | 63 | Hazard warning light | | |
| | 64 | Fuel gauge operation | | |
| | 65 | Temperature gauge operation | | |
| | 66 | All warning lights illuminated with ignition "ON" | | |
| | 67 | Dashboard light operation with Headlights ON | | |
| | 68 | Windshield wiper/washer operation | | |
| | 69 | Audio system—radio/CD/cassette, speaker operation(audio steering wheel controls if applicable) | | |
| | 70 | Immobilizer / Central locking operation (if applicable) | | |
| | 71 | Clock functions (If applicable) | | |
| | 72 | Defogger operation (if applicable) | | |
| | 73 | Headlight leveler operation (if applicable) | | |
| | 74 | Cigarette lighter/power outlets (if equipped) | | |
| | 75 | Check keyless entry operation | | |
| | 76 | SRS airbags—exterior condition/check warning lamp self check | | |
| | 77 | Outside mirror operation, left & right | | |
| | 78 | Rearview mirror operation—day/night operation | | |
| | 79 | Window operation—noise, speed and full travel | | |
| | 80 | Door locks—check manual and/or power operation and child safety function | | |
| | 81 | Power seat operation (if equipped) | | |
| | 82 | Rear wiper operation (If equipped) | | |
| | 83 | Inside mirror/vanity light operation | | |
| | 84 | Interior lights—switch/door operation | | |


HVAC

| | | | | |
|---|----|---|--|--|
|  | 85 | A/C cooling performance/vent outlet temperature | | |
| | 86 | Check Dual A/c performance (If applicable) | | |
| | 87 | A/c modes (Fresh Air/ Re-circulation / Other various modes) | | |
| | 88 | A/C pipes routing check | | |
| | 89 | Heater Knob operation check | | |

Power Train

| | | | | |
|---|----|--|--|--|
|  | 90 | Starting—cold/hot | | |
| | 91 | Idle vibration—cold/hot With Ac and without Ac | | |
| | 92 | Engine noise—cold/hot & high/low speeds | | |
| | 93 | Acceleration—Pick-up | | |
| | 94 | Engine operating temperature Radiator fan on off condition | | |
| | 95 | Check injector clicking noise (Use Soundscope) | | |
| | 96 | AT Parking gear operation | | |
| | 97 | Hydraulic clutch oil condition & level | | |

Steering

| | | | | |
|---|----|----------------------------------|--|--|
|  | 98 | Power steering—fluid level check | | |
| | 99 | Steering wheel tilt/lock | | |


Service

| | | | | |
|--|-----|--|--|--|
| | 100 | Air filter—if dirty or at service interval | | |
| | 101 | Brake fluid—if dirty/discholorred or at service interval | | |
| | 102 | Floor mats—replace mats, unless in good condition | | |
| | 103 | Wiper blades—replace unless they wipe windshield clean | | |
| | 104 | Tires—minimum tread depth 3mm across tread width | | |
| | 105 | Pollution Check (Issue Certificate if Expired) | | |
| | 106 | Throttle cable free play | | |
| | 107 | Nearest Service as per schedule (3 Months or 5000 Kms) | | |
| | 108 | Fuel filter—replace per maintenance schedule | | |




LIFT-UP CAR


HVAC

| | | | | |
|---|-----|---|--|--|
|  | 109 | A/C condenser—corrosion, road-hazard damage | | |
| | 110 | A/c evaporator condensor drain pipe | | |


Cooling

| | | | | |
|---|-----|---|--|--|
|  | 111 | Radiator—leaks, road-hazard damage | | |
| | 112 | Coolant hoses / clamps —check condition | | |


Power Train

| | | | | |
|---|-----|--|--|--|
|  | 113 | Drive Belt condition/tension, Alternator charging | | |
| | 114 | Driveshaft Boot Joint/drive axle noise—full lock turn right/left | | |
| | 115 | Engine/transmission mount condition | | |
| | 116 | Engine—oil leaks, drain plug threads | | |
| | 117 | Transmission leaks | | |
| | 118 | Entire exhaust system—condition, leaks, damage (O2 Sensor wire harness condition), noise | | |

Steering

| | | | | |
|---|-----|-----------------------------|--|--|
|  | 119 | Ball joint tightness | | |
| | 120 | Tie rod end tightness | | |
| | 121 | Power steering rack leakage | | |


Suspension

| | | | | |
|---|-----|---|--|--|
|  | 122 | Brake pad thickness | | |
| | 123 | Brake rotor thickness and surface | | |
| | 124 | Brake caliper free movement | | |
| | 125 | Brake caliper leakage | | |
| | 126 | Rear lining thickness (if applicable) | | |
| | 127 | Rear-wheel cylinder leakage (if applicable) | | |
| | 128 | Rear drum thickness and surface | | |
| | 129 | Brake Hydraulic hose/line leakage | | |
| | 130 | Suspension—springs, proper ride height | | |
| | 131 | McPherson strut/shock absorber leakage | | |
| | 132 | Bushing condition | | |


Service

| | | | | |
|--|-----|---|--|--|
| | 133 | Engine oil & filter—with genuine Honda filter | | |
| | 134 | Coolant—replace if dirty or at service interval with genuine Honda fluid | | |
| | 135 | Disc brake pads—replace if wear is greater than 50% | | |
| | 136 | Automatic transmission fluid—replace if discolored or at service interval | | |
| | 137 | DPS Fluid condition check (If applicable) | | |


TEST DRIVE POINTS**Electrical**

| | | | | |
|---|-----|--|--|--|
|  | 138 | Cruise control operation (If equipped) | | |
| | 139 | Speedometer/odometer operation | | |

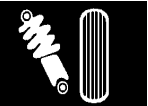
Power Train

| | | | | |
|---|-----|--|--|--|
|  | 140 | Drive-ability—smoothness | | |
| | 141 | AT shift quality/AT shift points No Jerks while shifting | | |
| | 142 | MT shifter operation (Hard/Sticky/Slippage of gears) | | |
| | 143 | MT clutch—smoothness, effort, slippage | | |
| | 144 | Transmission/transaxle noise—cold/hot | | |

Steering

| | | | | |
|---|-----|--|--|--|
|  | 145 | Steering effort—drifting right or left | | |
| | 146 | Steering wheel free play/steering wheel centered | | |
| | 147 | Tire or steering wheel vibration | | |

Suspension

| | | | | |
|---|-----|---|--|--|
|  | 148 | Braking—noise, vibration, effort | | |
| | 149 | Wind noise/squeaks/rattles | | |
| | 150 | Body/suspension—performance/noise/rough road test | | |